



YLI ELECTRONIC




Double Pole Resetable Call Point with LED

Model: CPK-862G-2(LED)


Specification

- Dimensions: 96.6Lx91.5Wx34.5H(mm)
- Output Contact: MDPDT/2NO/2NC/2COM
- Power Supply: DC12/24V,30mA
- LED Indicator: Default Green,Active Red
- Buzzer: Set to silent or buzzer continuously
- Panel logo: Customizable
- Mechanical Life: 500,000 Tested aging test qualified
- Operating Temp: $-20^{\circ}\text{C} \sim +55^{\circ}\text{C}$ (-4-131F)
- Operating humidity: 0-95% (RH)
- Material: ABS,PC(Cover parts)
- Weight: 0.2kg


Wiring Diagram

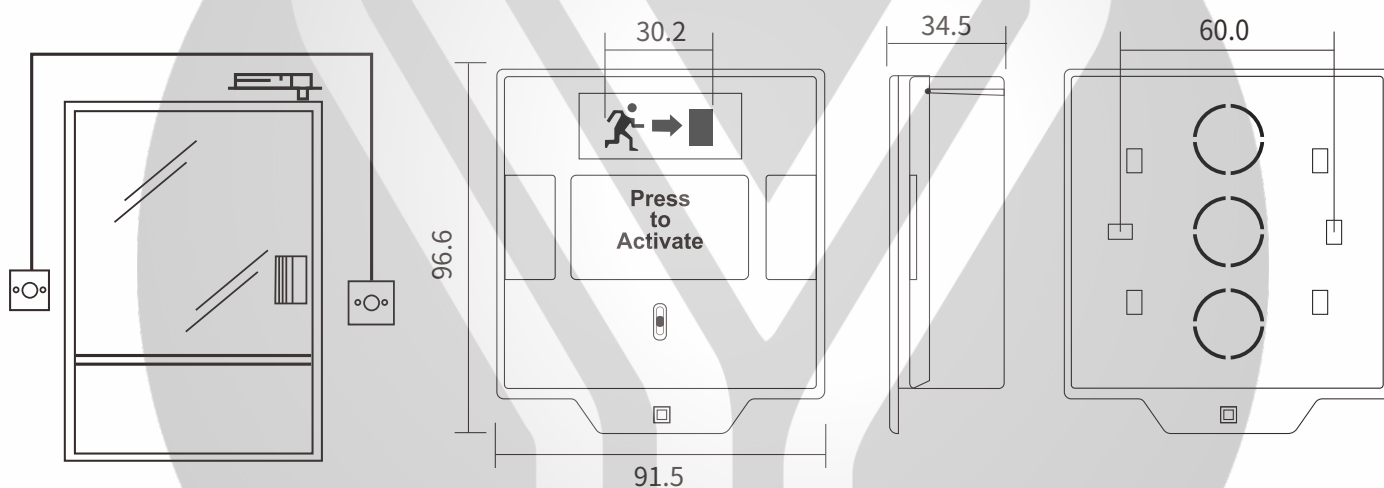


Wiring Instruction

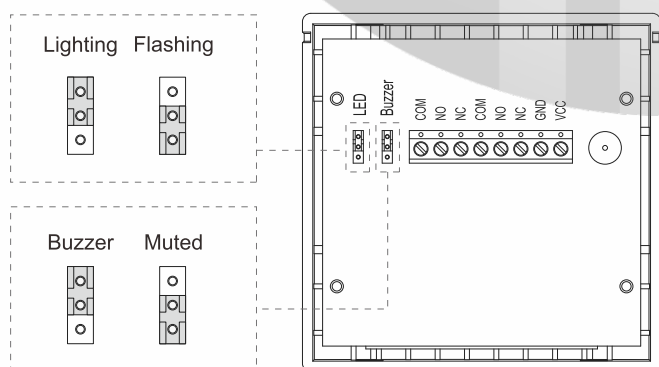

Installation

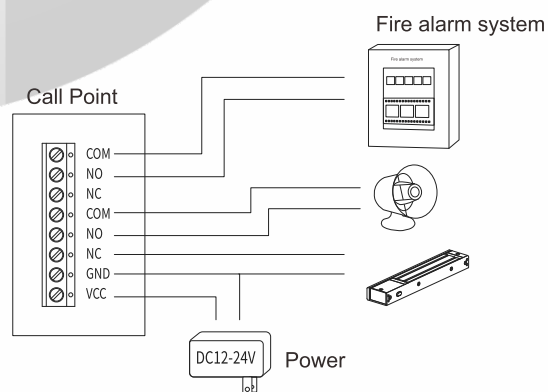



Installation steps

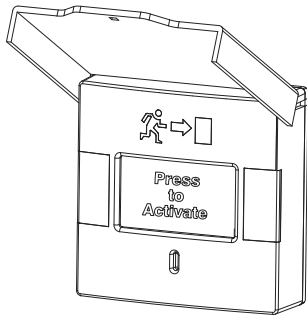

1

Step 1


Step 2

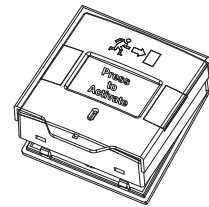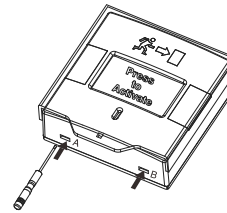

During installation, Take off the back box with the reset tool. Insert the reset pole about 1CM at front hole and pry up to open the front case.


2

Installation size

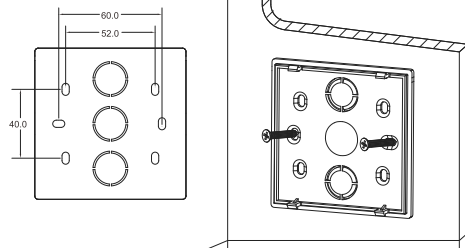

Fixed the back box on the wall.


3

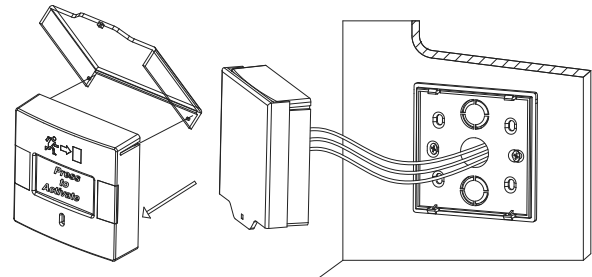

Put the protection cover onto the front case and connect the wire correctly.


4

Fasten the front cover

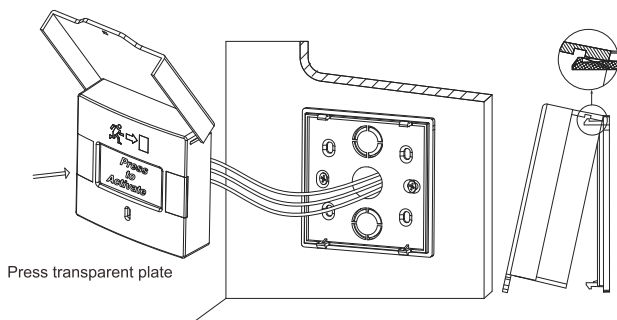

Fasten the front case on the back box. (Remark: before fasten the front case, you could test the function first. You could press the pressing plate and the buzzer will sound or silent and LED will change the color. LED will keep lighting or flashing base on your jump cap position)

5

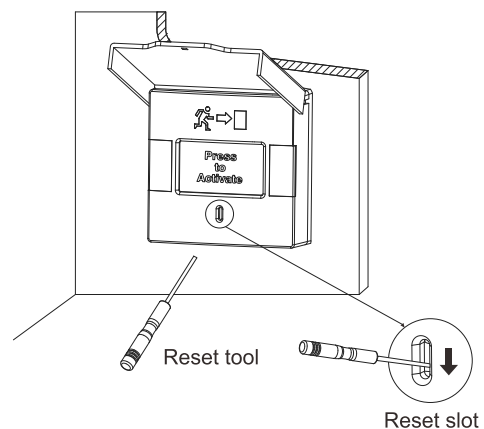

Insert the pole and drop down to remove the alarm.