

# **Single Door Magnetic Lock** with Signal (Big LED)






## **Specification**


Model	YM-180(BLED)	YM-280(BLED)	YM-350(BLED)	YM-500(BLED)
Lock Size	L187.5xW42.8xD21.4(mm)	L252.5xW48.8xD27.9(mm)	L262.5xW54.7xD28(mm)	L267.5xW73xD41(mm)
Armature plate	L130xW33xD10(mm)	L180xW38.8xD13.2(mm)	L190xW45xD13.2(mm)	L185xW60xD13.2(mm)
Holding Force	180kg(350Lbs)	280kg(600Lbs)	350kg(800Lbs)	500kg(1200Lbs)
Current	DC 12V/400mA±10%; DC 24V/200mA±10% DC 12V/500mA±10%; DC 24V/250mA±10%			
Voltage	DC12V(Default); DC24V(Adjustable)			
Signal Output	Lock signal(NO/NC/COM)			
LED Indication	Red shows locked ;Green shows unlocked			
Suitable for	Wooden door, Glass door, Metal door, Fireproof door			
Finishes for Magnetic	Zinc			
Operating Temp	-10~+55°C			
Weight	1.2kg	2.1kg	2.6kg	4.5kg


#### Diagram(unit:mm)

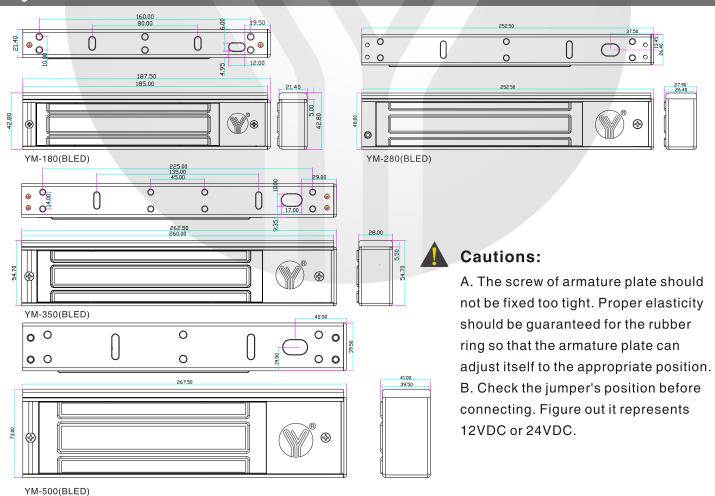


www.yli.cn

We create security

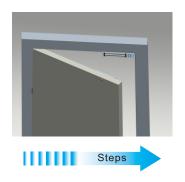


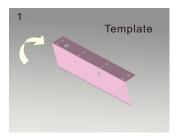

Fold the plate to  $90^{\circ}\,$  .

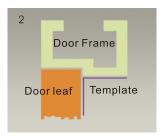


Close the door first, then place the upper side of template on door frame, while adjust the left side next to the door leaf.

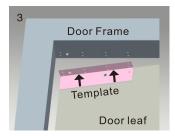


Mark screw positions of armature plate and magnetic lock on door leaf and door frame respectively.




Drill holes based on the marked positions.

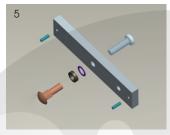


Make a combination based on the picture.

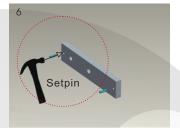

Strike the pin into the armature plate slightly (to avoid movement).

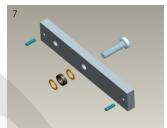


Make a combination based on the picture (add washer accordingly). The rubber ring must be added.

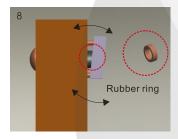

Place the rubber ring between armature plate and door leaf.




Use Allen key to remove the mounting plate from lock body.

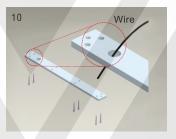

Fix the mounting plate on the door frame according to the holes drilled earlier.




Use Allen key to screw the lock body on the mounting plate.

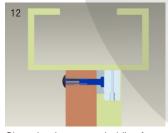


Close the door to test holding force. The angle between armature plate and magnetic lock can be adjusted by adding or reducing washers.




After all the appropriate procedures, the holding force can be maximized. Finally, fix the tamper screw.

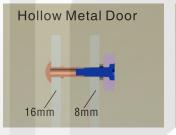

Drill a hole Inside: Diameter is 8mm Outside: Diameter is16mm

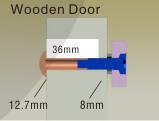

Drill a hole Inside: Diameter is 8mm Outside: Diameter is 12.7mm

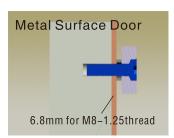

Inside:Drill a hole diameter is 8mm folding the plastic straight pin


### **Notice:**

Thickness of Door Leaf:

350LBS: 44mm 600LBS: 50mm 800LBS: 48mm 1100LBS: 46mm Different brackets are available according to different types of doors. For example, narrow door, frameless glass door and inward opening door.


## L Bracket-For outward opening door

When the door frame thickness is less than 42mm, L bracket is needed.

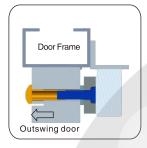




# ZL Bracket-For inward opening door For inward opening door, ZL bracket is needed.

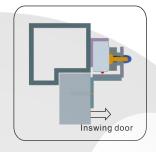



#### **U** Bracket


For the frameless glass door. U bracket is needed.

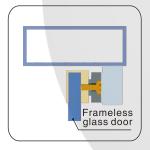




### I Bracket for armature plate

When the door frame is too thick, I bracket is needed.

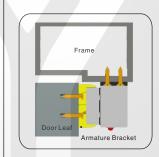





### **Installation Instruction**

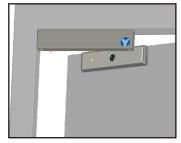


Demonstration of I Bracket Demonstration of L Bracket Demonstration of ZL Bracket Demonstration of UL Bracket Installation

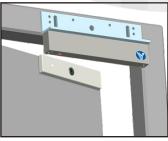

Installation

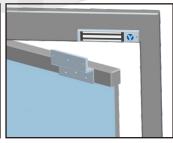

Installation

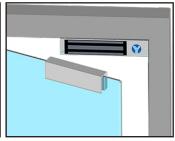

Installation

## **Circuit Board Diagram**

#### A.12VDC Input:

Connect the positive(+)lead from a 12VDC power source to V +.

Connect the ground(-)lead from a 12VDC power source to V -.


Check jumper for 12 VDC operation.

#### B.24VDC Input:


Connect the positive(+)lead from a 24VDC power source to V +.

Connect the ground(-)lead from a 24VDC power source to V -.

Check jumper for 24 VDC operation.

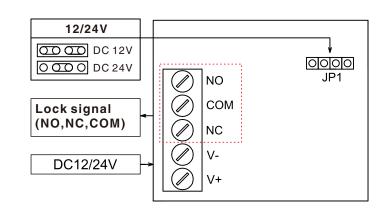

### **Wire Connection**

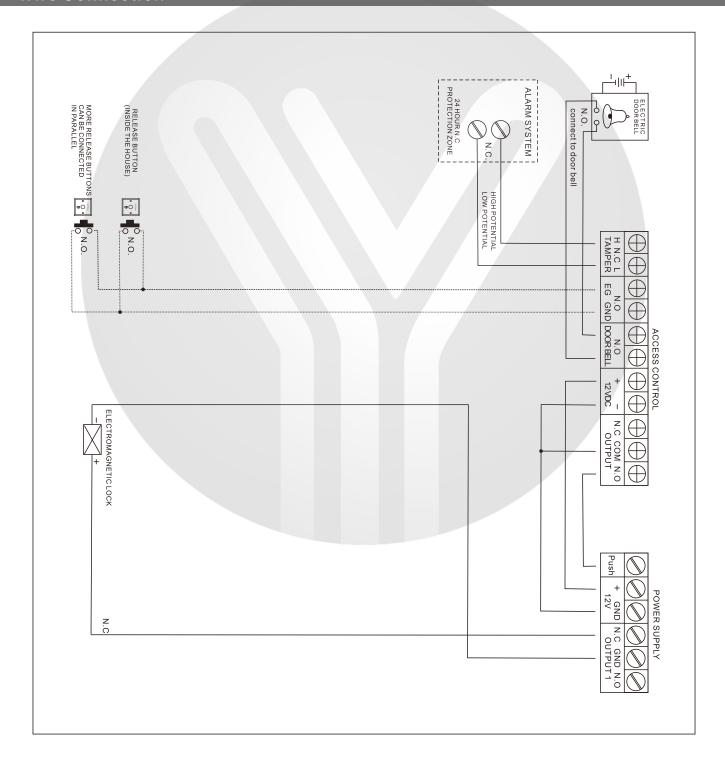

www.yli.cn We create security